

VI.5.3D-RRSSTGTS PROGRAM FCST HCL TECHNIQUE RRSSTGTS

Purpose

Technique RRSSTGTS sets whether stage time series data are to be printed.

Valid values are NO (0) and YES (1).

The Global default value is NO (0).

This Technique is Universal.

Form of Input

RRSSTGTS (integer)

where integer is 1 or 0 specifying whether or not to print data

Example

RRSSTGTS (1)

The stage time series data will be printed.